


# Product Sheet – 19VM Spreaders

Step 1. Bend center piece 90 degrees



Step 2. Drill 2.5mm hole in front of mast

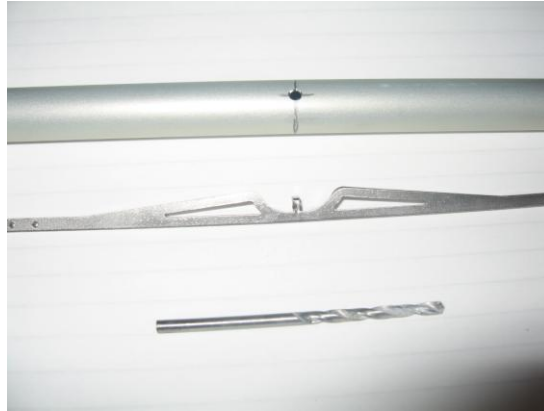

Step 3. Cut down to desired length with side cutters



Step 4. File the ends smooth



Step 5. Slide rigging wires thru holes



Step 6. Slide crimps onto wires and crimp to keep spreaders level

